



## Quick Start Guide HCUBE-102W

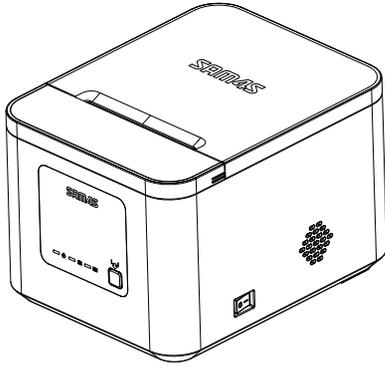

## Packing List

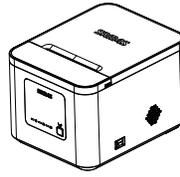

Printer



Power Cord



Quick Start Guide



USB Cable



Power Adapter




Paper Roll

### ⚠ Notes:



1. The items in the package are dependent on the actual order.
2. The power cord varies by country or region.

## Appearance


### ■ Front & Side View

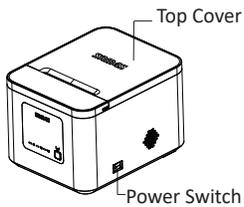

### ■ Back View

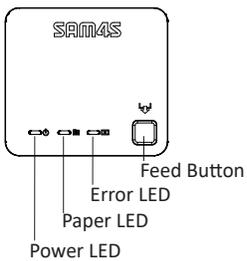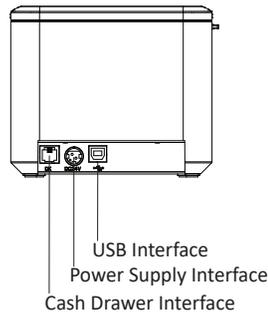


### ■ Bottom View

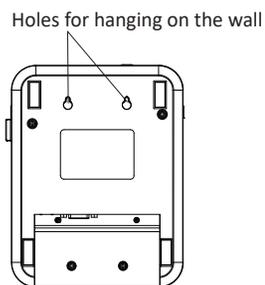


## Paper Loading

1. Press the cover opening button to open the top cover.
2. Load the paper roll in the correct direction of the paper roll.

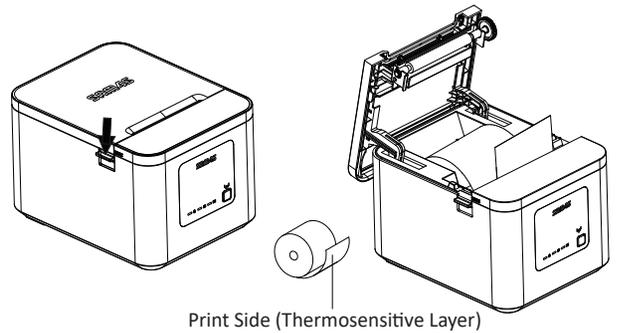


3. Pull out some paper, and close the printer cover.
4. Tear the extra paper.

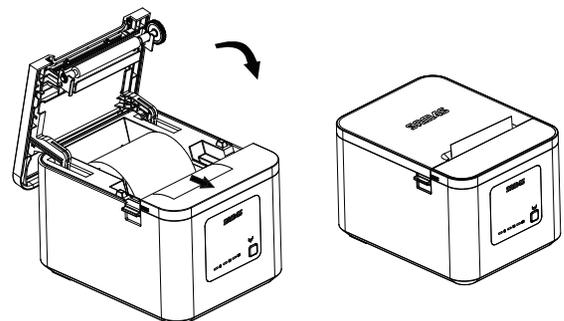

⚠ Note: Bluetooth and Wi-fi interfaces are embedded.

## Power Supply

1. Make sure the printer is turned off.
2. Connect the power adapter to the printer.
3. Connect the power adapter to the power cord.
4. Plug the other side of the power cord into the socket outlet.

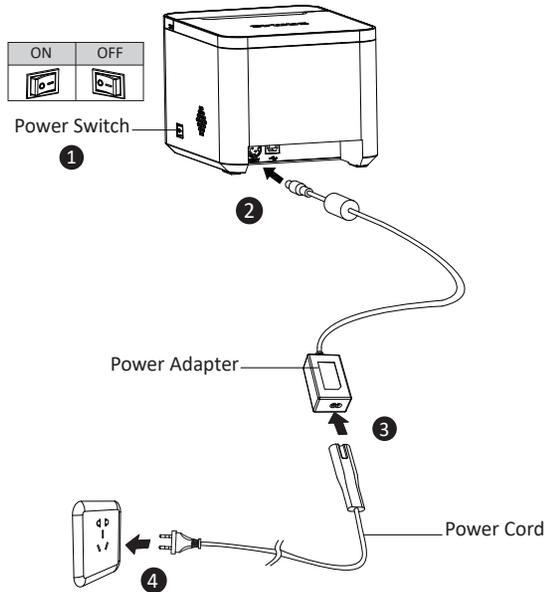

**⚠ Note:** the power cord varies by country or region.

### Caution:

This is a Class A product. In a domestic environment this product may cause radio interference in which the user may be required to take adequate measures.

## Bluetooth/Wi-Fi Settings

### 1. Bluetooth Settings

Default name: BT Printer

Default password: 0000 or 1234

Please refer to User Manual for details.

Note: This setting is only available for models with Bluetooth.

### 2. Wi-Fi Settings

Printer WiFi factory default is AP mode with IP address "192.168.1.1" and SSID "POS\_WIFI". After the PC or mobile phone is connected with printer successfully, users can do some parameter settings through utility tool. Please refer to User Manual for details.

Note: This setting is only available for models with Wi-Fi.